

**Atari[®] MEGA STE[™]
Coprocessor Installation Kit**

Reproduction of all or any portions of this manual is not allowed without the specific written consent of Atari Corporation.

Every effort has been made to ensure the accuracy of the product documentation in this manual. However, because Atari Corporation is constantly improving and updating its computer hardware and software, it is unable to guarantee the accuracy of printed material after the date of publication and disclaims liability for changes, errors, or omissions. These documents are for repair service information only. Part numbers are for reference only. Only parts on current dealer parts lists are available. No license is given for any use by the possession of these documents and may not be reproduced in any form without the written approval of Atari Corporation.

Atari, the Atari logo and MEGA STE are trademarks or registered trademarks of Atari Corporation.

Copyright 1991, Atari Corporation
Sunnyvale, CA 94089-1302
All rights reserved.

Coprocessor Installation Kit for the Atari® MEGA STE™

Kit Contents

Your Atari Coprocessor kit P/N CA401092-001 should contain the following items:

- Coprocessor Chip Part Number: C101718-101
- PAL Chip Part Number: C301903-001
- Installation Manual Part Number: C302228-001

If any of these components are missing from your kit please contact the outlet from which the kit was purchased.

Tools Required:

- Phillips screwdriver
- Flat blade (slotted) screwdriver

Installation

The following steps should be completed in the following order to install the Coprocessor in your Atari MEGA STE computer. Carefully read each step all the way through before taking any action required by that step.

WARNING

This installation should be performed in a static free environment. Static can cause damage to the coprocessor and PAL chips. Failure to perform each step completely or skipping steps could result in damage to the RAM Expansion board or your computer.

1. Turn off your computer and disconnect all cables from the sides and back of the unit (for example the keyboard, power cord, external disk drive and so on.).

2. Remove the accessory and top cover.
3. Locate the socket for the coprocessor UB2 as shown in Figure 1.

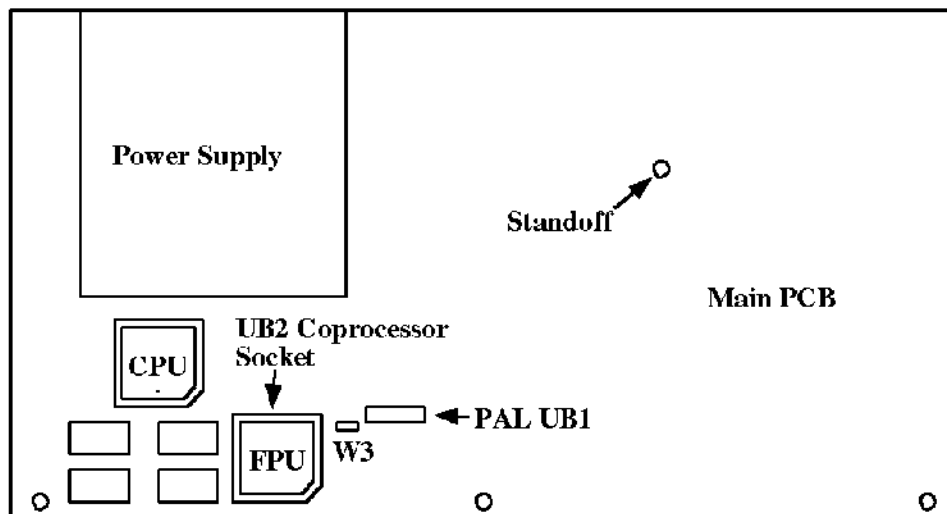


Figure 1

WARNING

When installing the coprocessor be sure not to bend any of the pins on the chip.

Install the coprocessor in the socket at UB2 with the dot on the coprocessor facing toward you and the beveled edge of the coprocessor lined up with the beveled edge of the socket. See Figure 1.

4. Locate the socket for the PAL chip UB1. See Figure 1.
5. Install the PAL chip in socket UB1 with the notch facing toward the left. See Figure 1.

WARNING

When installing the PAL chip be sure not to bend any of the pins on the chip.

6. Locate the jumper labeled W3. See Figure 1. Some main PCB's do not have a jumper. If this is the case skip step 7 and perform steps 8 through 12.

7. Remove the jumper labeled W3 and park it on 1 pin. Skip steps 8 through 11 and continue with step 12.
8. Remove the main PCB and turn it over with the electronic parts facing down.
9. Locate the resistor on the socket for the PAL chip UB1. It should be the only electronic part on that side of the main PCB.
10. With a pair of wire cutters, cut the wires coming out of each end of the resistor and discard it.
11. Turn the main PCB back over and install it in the bottom case.
12. Put the accessory and top case back on the computer.

Notes

Notes

Copyright 1991, Atari Corporation
Sunnyvale, CA 94089-1302
All rights reserved.



Printed in Taiwan
C302228-001 REV. A